 


Freezer

INSTRUCTION BOOKLET

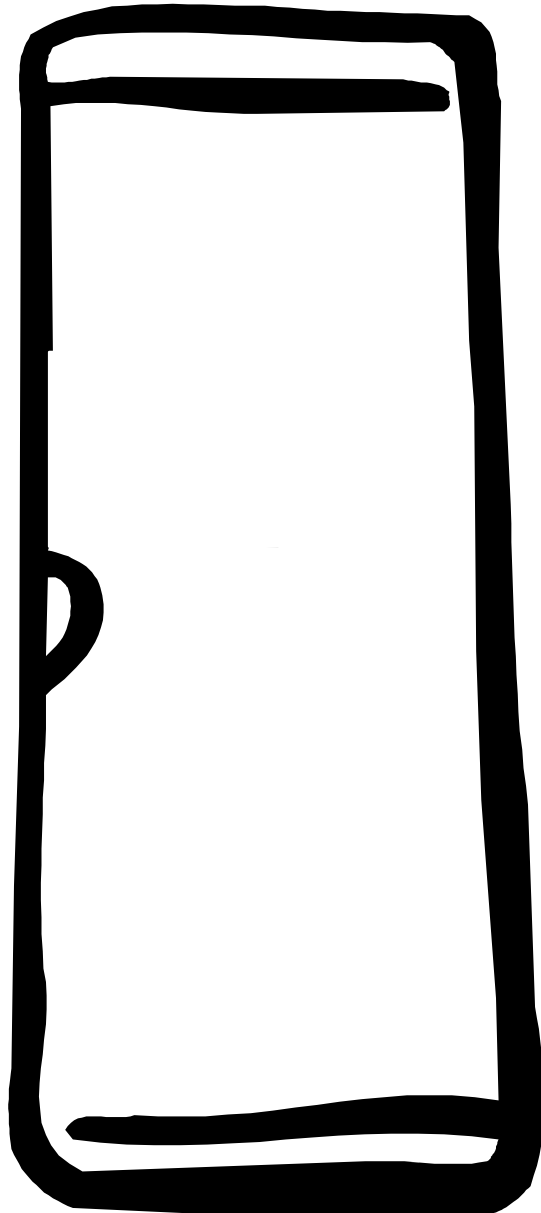

EU8216C

Important Safety Instructions



Your new freezer may have other functions compared to your previous one.

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or warnings contact the Customer Care Department.

Keep the instruction booklet. It will come in handy if you later sell the cabinet or give it to somebody else.

For the User

- The cabinet is intended for keeping foodstuff in a normal household as explained in this instruction booklet.
- Do not keep explosive gases or liquids in the refrigerator or freezer compartment. They may explode and cause injury and material damage.
- Do not let sharp objects come into contact with the refrigerating system on the back of and inside the cabinet. If the refrigerating system is punctured, the cabinet will be damaged and foodstuff inside may spoil.
- Do not keep carbonised drinks or bottles in the freezer compartment. The glass bottles may break.

- The cabinet is heavy. The edges and projecting parts of the cabinet may be sharp. Be careful when moving the cabinet and always use gloves.

Child Safety

- Pay attention so that small children do not gain access to the operating controls or the inside of the cabinet.

Scrapping old cabinets

When discarding the cabinet, hand it over to a recycling station. For more information, call your local city office or your dealer.

Contents




Important Safety Instructions	2
Scrapping old cabinets	2
Contents	2
Description of the Appliance	3
Control Panel	3
Before use	3
Using the freezer	4
To start the freezer and thermostat control	4
Temperature inside the freezer	4
Switching off	4
Alarms and other features	4
Freezing	4
Suitable storage periods	5
Thawing	5
Cabinet interior	5
Hints and Tips	6
Energy Saving Advice	6
Food Storage	6
Protect the environment	6

Maintenance and Cleaning	7
Removing the ventilation grille	7
Internal Cleaning	7
External Cleaning	7
To Change the Light Bulb	7
Defrosting the freezer	8
When the appliance is not in use	8
Something Not Working	8
Service and Spare Parts	9
Customer Care Department	9
Guarantee Conditions	13
Standard Guarantee Conditions	13
Technical specification	14
Installation	14
Unpacking	14
Removing the transport supports	14
Cleaning	14
Installing the cabinet	14
Electrical connection	15
Door Reversal	16

Description of the Appliance

 
GB

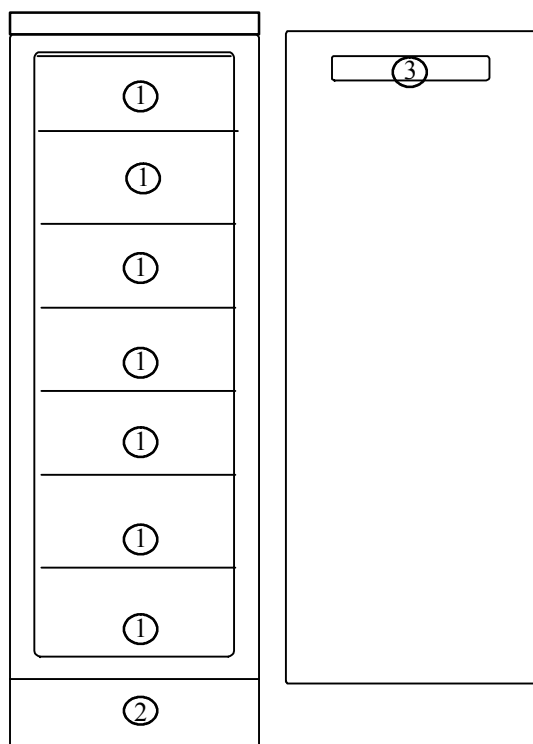

Model EU8216C

1. Freezing basket
2. Ventilation grille
3. Freezer calendar

 Control Panel

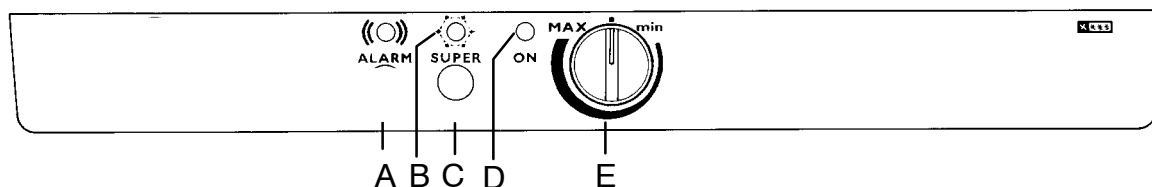

A. Red warning light

Flashes when one of the alarms in the cabinet has been triggered.

B. Yellow indicator light

Illuminates when Fast Freeze is operating.

C. FAST FREEZE button

Used to switch the Fast Freeze feature on and off.

D. Green indicator light

Illuminates when the freezer is operating.

E. Thermostat control

Use to switch on and set the desired temperature in the freezer.

Before use

GB

Position and clean the cabinet as explained in the section "Installation".



Before inserting the power plug into the outlet and switching on the cabinet for the first time, leave it standing upright for about 30 minutes, or for 4 hours if it was transported horizontally. Otherwise the compressor may sustain damage. This time will allow the oil sufficient time to return to the compressor.

To start the freezer and thermostat control

 
Turn the thermostat control to the desired position.

MIN The lowest position of the thermostat control results in the highest temperature inside the cabinet.

MAX The highest position of the thermostat control results in the lowest temperature inside the cabinet.

■ : Switched off.

Allow the cabinet to run for a period of 24 hours whenever the temperature setting is changed. This will allow the temperature to stabilise inside the cabinet.




Temperature inside the freezer

To ensure that foodstuff will keep for a long time, be sure that the temperature inside the freezer is -18°C or below. Please note, however, that the energy consumption increases as the temperature decreases.

Switching off

Turn the control anti-clockwise past the click position to "■".

 Unplug the power supply plug from the wall socket or, alternatively, remove the fuse.




Alarms and other features

Temperature alarm

The red warning light illuminates when the temperature inside the cabinet rises above -12°C .

 The light goes out again when the temperature falls below -13°C .




Freezing

You need not press the fast-freezing button when freezing smaller quantities of food during any 24-hour period.

In all other cases, press the fast-freezing button approx. 24 hours prior to placing the food in the freezer.


Press the fast-freezing button to switch off fast-freezing again about 24 hours after placing the food in the freezer.

 The yellow fast-freezing lamp remains lit as long as the fast-freezing button is engaged.



Practical advice on freezing

 - When freezing products, use the top shelf, and if necessary the shelf beneath as this is the coldest part.
- Place the foods directly on the freezer shelves.
- Spread out the products as much as possible to allow air to circulate between them.
- Do not place food products which are to be frozen directly against other frozen food. The heat from the unfrozen food may cause the frozen food to thaw on the surface.
- Once frozen, re-arrange the products and put them as close as possible to each other. The food will then stay cold longer in the event of a power failure.
- Do not freeze too much food at the same time. The freezing capacity of the unit is indicated in the specifications section.

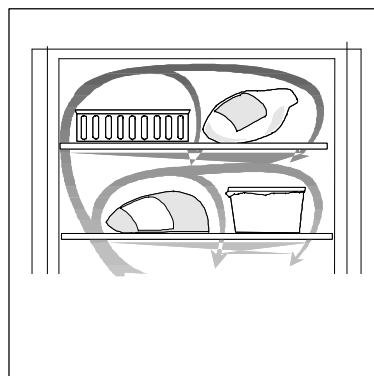

Check that the cabinet is operating and keeps the set temperature one day after switching it on for the first time. Only after then should the freezer be used to freeze fresh foodstuff.

Suitable storage periods

Food purchased in frozen condition: Follow the advice on the maximum storage period indicated on the packaging.

Fresh food frozen at home:

Fatty and salty food should not be kept frozen for more than three months. Cooked food and low-fat food may be kept up to about six months. Lean food and berries can be kept for approximately one year.

Thawing

 
It is best to use a fridge to thaw food. Place the foodstuff on a plate with a raised edge to prevent liquids from running out. To quickly thaw food, put it in room temperature or in cold water. When using a microwave oven to thaw foodstuffs, follow the manufacturer's instructions.

Cabinet interior

Freezer drawers

The freezer drawers make it easy to quickly and easily find the food package you want. To gain space, the drawers can be removed and the products can be put directly on the shelves. On all shelves, except the top shelf, it is possible to place products that protrude 20 mm from the front edge. This allows maximum use of the available space.


Do not remove the bottom drawer. It is required to assure proper air circulation.

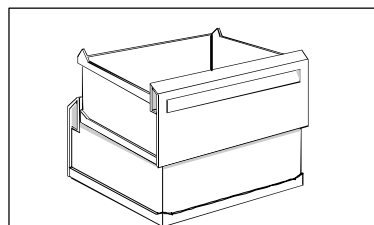

Ice cubes

Fill the ice tray to max. 3/4 since water expands as it freezes. Release the ice cubes by twisting the ice tray.

 If ice cubes are kept for a long time, they will dry out and the taste is affected. Thus, throw away old ice cubes and prepare new ones when needed.

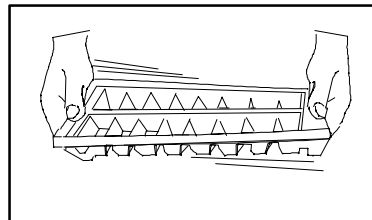

Hints and Tips



Energy Saving Advice

- Pay careful attention to where the cabinet is placed. See the section "Installation". When installed correctly, the cabinet will consume less energy.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.
- Thaw frozen food in the fridge. This will ensure safer defrosting of foods and reduce the work of the refrigeration unit
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.
- Avoid unnecessary frosting in the cabinet by packing all foodstuffs into airtight packages before placing them in the freezer.
- Carefully follow the advice on freezing products in the section "Use". This will prevent wasting energy.
- Do not set the temperature too low in the freezer. A suitable temperature is in the range of -18°C to -20°C .
- Defrost the freezer when the frost layer reaches a thickness of 3-5 mm. Regularly check the door seal to ensure that it is clean and free from debris.
- Make sure the door gasket is complete and always clean.

Food Storage

- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larger compartment.
- Avoid buying frozen food if you can not store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best.
Remove suspect food from your refrigerator and clean, refer to cleaning and maintenance.

Protect the environment

- Hand over the cabinet packaging and discarded fridges and freezers to a recycling station. Contact your local council or Environmental Health office for more information.
- Keep foodstuff in re-usable containers. Cut down on disposable material as much as possible.
- When cleaning the cabinet, use a mild washing-up detergent.
- Follow the advice in the section "Saving energy"
- The door gasket and coolant used in this cabinet will not harm the ozone layer.
- All parts in the packaging can be recycled.
- The cabinet has been designed for easy dismantling and subsequent recycling.

 
Maintenance and Cleaning



Removing the ventilation grille

The ventilation grille can be removed, e.g. to wash the grille.

Make sure the door is open when removing the ventilation grille. Unsnap the upper edge of the grille by pulling outward/downward. Then pull the grille straight out to completely remove it.

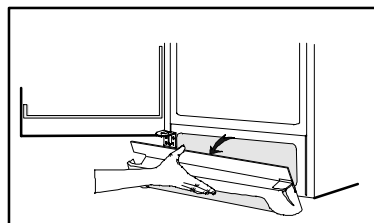

Internal Cleaning

Clean the inside and the accessories with warm water and bicarbonate of soda (5 ml to 0,5 litre of water).

Rinse and dry thoroughly.



Do not use detergents, abrasive powders, high perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol .

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

 
Disconnect the appliance from electricity supply.

Internal Cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0,5 litre water)

Rinse and dry thoroughly.


Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

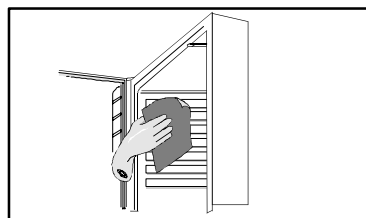

External Cleaning

Wash the outer cabinet with warm soapy water.

 Remove the ventilation grille (see the section "Removing the ventilation grille") and vacuum-clean under the cabinet. Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

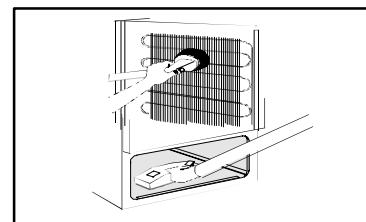


When moving the cabinet, lift it by the front edge to avoid scratching the floor.

To Change the Light Bulb

The light is switched on automatically when the door is opened. Before replacing the light bulb, disconnect the power plug from the outlet.

Press the spring together and pull the grille downward at the same time.

 Use a bulb of the same type, E14 socket, maximum rating of 25 W.

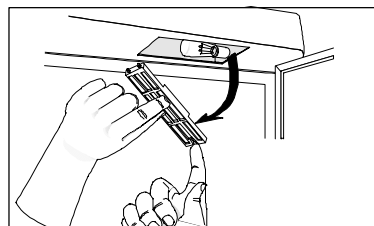

Defrosting the freezer

A certain amount of frost will always form on the freezer shelves and around the top compartment. Defrost the freezer when the frost layer reaches a thickness of about 3-5 mm.

Remove the freezer drawers and place them on top of each other by turning every other drawer one half turn. Put insulating material around the drawers, e.g. blankets or newspapers.

The frozen products can also be packed closely together and be kept in a cold location, e.g. in the fridge.

Defrosting can be accelerated by placing bowls with hot water (not boiling) inside the freezer.

Take out the drain spout and place it in the bottom freezer drawer where water can collect.

 
 
 
Loosen the ventilation grille to enable the bowl to fit under the drain spout.

Carefully scrape off the ice when it starts to thaw.

Use a wood or plastic scraper. Do not use sharp objects as these may damage the interior.

When all the ice has melted, clean and wipe the cabinet dry, then push the drain spout back in place.

Switch on the cabinet and replace the frozen foodstuff.

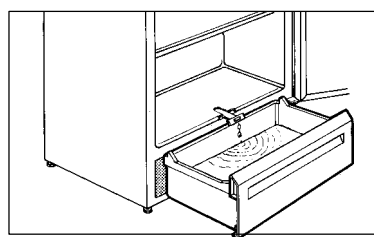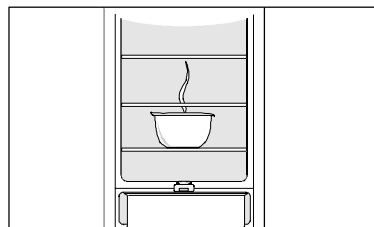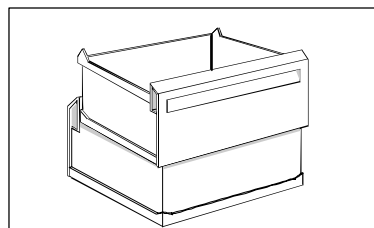

Never use a hair dryer or other heating appliances to speed up defrosting. Excessive heat may damage the plastic interior, and humidity could enter the electric appliance making it live.

When the appliance is not in use

Disconnect the appliance from electricity supply.

Empty all foods and clean the appliance, leaving the doors ajar to prevent unpleasant smells.

If the cabinet will be kept on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure.

Something Not Working

GB

Before contacting your local Service Force Centre check the following point:

Problem	Possible cause / Remedy
Audible alarm + flashing red warning lamp. (It is too warm inside the freezer.)	Switch off the audible alarm by pressing the alarm shut-off button. The audible alarm could have been triggered by: The cabinet having been recently switched on and the temperature still being too high. See the chapter "Switching on and setting the temperature".
It is too warm inside the freezer.	Set a lower temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean. If warm food products have been put inside the freezer, wait for a couple of hours and then check the temperature again. Distribute the food products to allow cold air to circulate around them.
It is too cold inside the freezer.	Set a warmer temperature. Fast Freeze could have been switched on.

Too much frost and ice are produced.	Make sure that the door is completely closed and that the insulating strip is complete and clean. Set a warmer temperature.
The compressor operates continuously.	Set a warmer temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean. The temperature where the cabinet is placed is above normal room temperature.
The cabinet does not operate at all. Cooling or interior light does not operate. No indicator lamps light.	The power plug is not properly connected. The fuse has blown. The cabinet is not switched on. Power does not reach the cabinet. (Try connecting another electrical device to the power outlet.)
Sound level in cabinet is too high.	The refrigerating system will always produce some sounds. A pulsing sound is heard when coolant is pumped inside the cooling pipes. A ticking sound from the thermostat can be heard when the compressor switches on and off. The sound level varies depending on the operation of the cabinet. If the cushion spacers (between the cabinet wall and pipes) come loose, put them back in place again. Carefully follow the instructions in the chapter "Installing the cabinet".
Power failure	Do not unnecessarily open the cabinet, except when the power cut seems to be long, in which case the food products should be moved to another cabinet that works. If the frozen products are still hard following the power cut, they may be immediately refrozen. If the food products have thawed but are still fresh, they may be used, however they should be prepared before re-freezing or eating them.

Service and Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Electrolux Service Force Centre by telephoning:

08705-929929

Your call be routed the Service Force Centre covering your post code area.

Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working"

When you contact the Service Force Centre you will need to give the following information:

1. Your name, address and post code
2. Your telephone number
3. Clear and concise details of the faults
4. The model and serial number of the appliance (found on the rating plate)
5. Purchase date.....

Customer Care Department

For general enquiries concerning your Electrolux appliance or further information on Electrolux products, you are invited to contact our Customer Care Department by letter or phone as follows:

Customer Care Department

Electrolux

55-77 High Street

Slough

Berkshire

SL1 1DZ

Phone: 08705 950950 *

* calls to this number may be recorded for training purposes

To contact your local Electrolux Service Center telephone **08705 929 929**

MIDLANDS BIRMINGHAM (M18) 66 Birch Road East, Wyrley Road Ind Estate Witton Birmingham B6 6DB	LONDON & EAST ANGLIA BECKENHAM (M79) 11A Gardener Ind Estate Kent House Lane Beckenham Kent BR3 1QZ	NORWICH (M52) 2b Trafalgar Street Norwich NR1 3HN
BOURNE (M44) Manning Road Ind Estate Pinfold Road Bourne PE10 9HT	CHELMSFORD (M47) Hanbury Road Widford Ind Estate Chelmsford Essex CM12 3AE	SUNBURY (M63) Unit 1a The Summit Hanworth Road Hanworth Ind Estate Sunbury on Thames TW16 5D
BRIDGNORTH (M72) 68 St. Mary's Street Bridgnorth Shropshire WV16 4BB	COLINDALE (M53) Unit 14 Capitol Park Capitol Way Colindale London NW9 0EQ	SOUTH EAST ASHFORD (M58) Unit 2 Bridge Road Business Estate Bridge Road Ashford Kent TN2 1BB
GLOUCESTER (M23) 101 Rycroft Street Gloucester GL1 4NB	ELTHAM (M78) 194 Court Road Mottingham Eltham London SE9 4EW	FLEET (M59) Unit 1 Redfields Industrial Estate Church Crookham Fleet Hampshire GU13 0RD
HEREFORD (M31) Unit 3 Bank Buildings Cattle Market Hereford HE4 9HX	ENFIELD (M49) 284 Alma Road Enfield London EN3 7BB	HAYWARDS HEATH (M55) 21-25 Bridge Road Haywards Heath Sussex RH16 1UA
HIGHAM FERRERS (M51) 30 High Street Higham Ferrers Northants NN10 8BB	GRAVESEND (M57) Unit B4, Imperial Business Estate Gravesend Kent DA11 0DL	SOUTH WEST BARNSTAPLE (M30) Main Road Fremington Barnstaple North Devon EX31 2NT
ILKESTON (M43) Unit 2 Furnace Road Ilkeston DE7 5EP	HARPENDEN (M46) Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN	BOURNEMOUTH (M26) 63-65 Curzon Road Bournemouth Dorset BH1 4PW
LEICESTER (M22) Unit 7 Oaks Ind. Estate Coventry Road Narborough Leicestershire LE0 5GF	LETCHEWORTH (M50) 16-17 Woodside Ind Estate Works Road Letchworth Herts SG6 1LA	BRIDGEWATER (M35) 6 Hamp Industrial Estate Bridgewater Somerset TA6 3NT
LINCOLN (M40) Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA	LONDON (M76) 2/4 Royal Lane Yiewsley West Drayton Middlesex UB7 8DL	BRISTOL (M25) 11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ
NEWCASTLE UNDER LYME (M12) 18-21 Croft Road Brampton Ind. Estate Newcastle under Lyme Staffordshire ST5 0TV	MAIDENHEAD (M60) Reform Road Maidenhead Berkshire SL6 8BY	EMSWORTH (M33) 266 Main Road Southbourne Emsworth PO10 8JL
REDDITCH (M20) 13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND	MOLESEY (M61) 10 Island Farm Avenue West Molesey Surrey KT8 2UZ	ISLE OF WIGHT (M34) Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB
TAMWORTH (M19) Unit 3 Sterling Park Claymore Tamworth B77 5DO	NEWBURY (M24) 9 Pipers Court Berkshire Drive Thatcham Berkshire RG14 4ER	NEWTON ABBOT (M29) Unit 2 Zealley Industrial Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD
WORCESTER (M73) Unit 1 & 2 Northbrook Close Gregorys Mill Ind Es- tate Worcester WR3 8BP	IPSWICH (M48) Unit 6C Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD	REDRUTH (M36) Unit 7D Pool Ind. Estate Wilson way Redruth Cornwall TR15 3QW
CHANNEL ISLAND GUERNSEY Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands	KELSO (M08) 2-8 Wood Market Kelso Borders TD5 7AX	NORTH EAST GATESHEAD (M39) Unit 356a Dukesway Court Dukesway Team Valley Gateshead NE11 0BH

JERSEY	Jersey Electricity Company PO Box 45 Queens Road St Helier Jersey Channel Islands JE4 8NY	ORKNEY (M65)	Corsie Domestics 7 King Street Kirkwall Orkney KW15	GRIMSBY (M42)	15 Hainton Avenue Grimsby South Humberside DN32 9AS
SCOTLAND					
ABERDEEN (M05)	54 Claremont Street Aberdeen AB10 6RA	PERTH	Hydro Electric Inveralmond House Ruthvenfield Road Perth PH1 3AQ	HULL (M41)	Unit 1 Boulevard Industrial Estate Hull HU3 4AY
AUCHTERMUCHY (M03)	33a Burnside Auchtermuchy Fife KY14 7AJ	PERTH (OWN SALES)	Graham Begg Unit 4 Airport Ind Estate Wick KW1 4QS	LEEDS (M37)	64-66 Cross Gates Road Leeds LS15 7NN
BLANTYRE (M07)	Unit 5 Block 2 Auchenraith Ind Estate Rosendale Way Blantyre G72 0NJ	SHETLAND (OWN SALES)	Tait Electronic Systems Ltd. Holmsgarth Road Lerwick Shetland ZE1 0PW	NEWTON AYCLIFFE (M45)	Unit 16 Gurney Way Aycliffe Ind Estate Newton Aycliffe DL5 6UJ
DUMFRIES (M01)	93 Irish Street Dumfries Scotland DG1 2PQ	SHETLAND (OWN SALES)	Bolts Shetland Ltd 26 North Road Lerwick Shetland ZE1 0PE	SHEFFIELD (M38)	Pennine House Roman Ridge Ind. Roman Ridge Road Sheffield S9 1GB
DUNOON (M67)	Briar Hill 7 Hill Street, Dunoon Argyll PA23 7AL	WHALSAY (OWN SALES)	Leask Electrical Harlsdale Symbister, Whalsay Shetland ZE2 9AA	NORTH EAST	
GLASGOW (M04)	20 Cunningham Road Clyde Estate Rutherglen, Glasgow, G73 1PP	NORTHERN IRELAND		BIRKENHEAD (M11)	1 Kelvin Park Dock Road Birkenhead L41 1LT
INVERNESS (M06)	Unit 3B Smithton Ind Estate Smithton Inverness IV1 AJ	BELFAST (M27)	Owenmore House Kilwee Business Park Upper Dunmury Lane Belfast BT17 0HD	CARLISLE (M10)	Unit 7 James Street Workshops James Street Carlisle Cumbria CA2 5AH
ISLE OF ARRAN (OWN SALES)	Arran Domestics Unit 4 The Douglas Centre Brodick Isle of Arran KA27 8AJ	WALES		ISLE OF MAN (M64)	South Quay Ind Estate Douglas Isle of Man IM1 5AT
ISLE OF BARRA (OWN SALES)	J Zarfah 244 Bruernish Isle of Barra Western Islands HS9 5QY	CARDIFF (M28)	Guardian Industrial Estate Clydesmuir Road Tremorfa Cardiff CF2 2QS	LIVERPOOL (M15)	Unit 1 Honeys Green Precinct Honeys Green Lane Liverpool L12 9JH
ISLE OF BUTE (OWN SALES)	Walker Engineering Glenmhor Upper Serpentine Road Rothesay Isle of Bute PA20 9EH	CLYWD (M14)	Unit 6-7 Coed - Parc Abergele Road Rhuddlan Clwyd Wales LL18 5UG	MANCHESTER (M09)	Unit B Central Industrial Estate St Marks Street Bolton BL3 6NR
ISLE OF LEWIS	ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW	DYFED (M77)	Maes Y Coen High Mead Llanybydder Carmarthenshire SA40 9UL	PRESTON (M13)	Unit 250 Dawson Place Walton Summit Bamber Bridge Preston Lancashire PR5 8AL
		HAVER-FORDWEST (M75)	Cromlech Lodge Ambleston Haverfordwest Pembrokeshire SA62 5DS	STOCKPORT (M16)	Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR
		OSWESTRY (M17)	Plas Ffynnon Warehouse Middleton Road Oswestry SY11 2PP		

Guarantee Conditions



Standard Guarantee Conditions

We, undertake that if within 12 months of the date of the purchase this appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a ELECTROLUX SERVICE CENTRE.
- Any appliance or defective part replaced shall become the company's property.
- This guarantee is in addition to your statutory and other legal rights.

Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment plus those which are subject to rental agreements.
- Products of Electrolux manufacture which are not marked by Electrolux.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed and taking into account regulations in your new country.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0)3 44 62 22 22
Germany	Nürnberg	+49 (0)911 323 26 00
Italy	Prodenone	+39 (0)1678 47053
Sweden	Stockholm	+46 (0) 20 78 77 55
UK	Slough	+44(0) 1753 21 98 98

Technical specification

GB

Model	EU8216C
Gross volume	286 l
Width	595 mm
Height	1800 mm
Depth	600 mm
Energy consumption	496 kWh/Year
Energy class	C
Rated power	120 W
Freezing capacity	28 kg/24 hours

Installation

GB

Unpacking

Unpack the cabinet and check that it is in good condition and free of any transport damage. Notify the dealer immediately of any damage. Hand the packaging over for recycling.

Removing the transport supports

Remove the transport supports placed along the door sides inside the hinges

Cleaning

Wash the inside of the cabinet using lukewarm water and bicarbonate of soda (5 ml to 0,5 litre of water).

Do not use soap or detergent as the smell may linger. Dry thoroughly.

 
 
 
Installing the cabinet

To obtain the best performance from the cabinet, ensure :

- the cabinet is placed in a dry, cool place and is not exposed to direct sunlight.
- the cabinet is not placed close to a source of heat, e.g. a cooker or dishwasher.
- the room in which the cabinet is placed has a temperature of +16°C to +32°C.
- the cabinet is level. The cabinet should not lean against any wall. If necessary adjust the feet using the adjustment spanner supplied.
- there is good air circulation around the cabinet and that the air channels below and behind the cabinet are not blocked. The ventilation space above the cabinet must be at least 200 cm². The ventilation space can either be
 - directly above the cabinet, or
 - behind and above the top cupboard. In this case, the space behind the cupboard must be at least 50 mm deep.



Do not allow children to play with the packaging. The plastic film can cause suffocation.

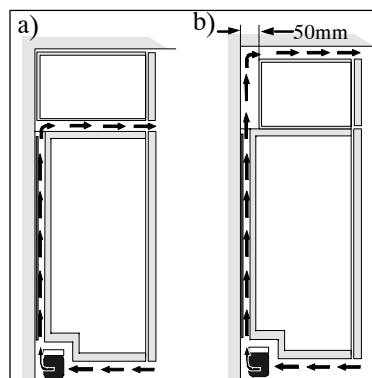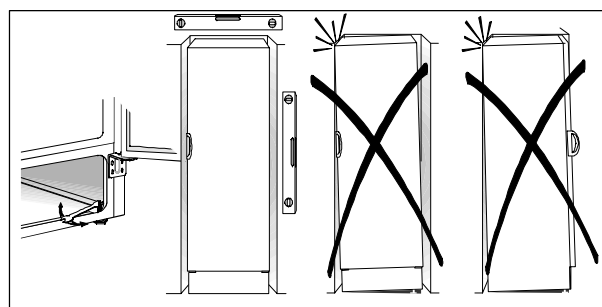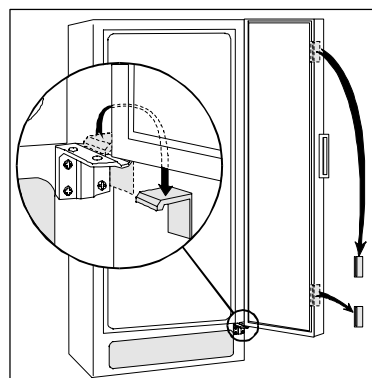

Climate classification	for an ambient temperature of
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+18°C to +38°C
T	+18°C to +43°C

If the cabinet is placed in a corner and the side with the hinges facing the wall, the distance between the wall and the cabinet must be at least 10 mm to allow the door to open enough so that the shelves can be removed.

Electrical connection



Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. This appliance must be earthed.

The manufacturer declines any liability should these safety measures not be observed.

Electrical Requirements


Before switching on, make sure the electricity supply voltage is the same as that indicated on the

appliance rating plate.

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1362) fuse must be used.

Should the plug need to be replaced for any reason. The wires in the mains lead are coloured in accordance with the following code:

Green and yellow	-Earth
Blue	-Neutral
Brown	-Live

The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol  or coloured green and yellow.

 
 
 
 
The wire coloured blue must be connected to the terminal marked "N" or coloured black

The wire coloured brown must be connected to the terminal marked "L" or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

Door Reversal

1. Close the cabinet and disconnect the appliance from the electricity socket.
2. Remove the ventilation grille. There is a part on the grille that can be removed. Reposition it and transfer to the opposite side.
3. Support the cabinet on a wooden block when it is laid down. This will make it easier to grip under the cabinet when resupporting to an upright position.
4. On the upper part of the cabinet. Remove the hinge pin and replace on the other side.
5. On the lower part of the cabinet.
 - a Unscrew the hinge.
 - b Remove the door-closing fittings from the hinge and put the hinge pin on the other side. Then attach the supplied door-closing fitting.
- 6 a. Remove the door-closing fitting from the bottom of the door.
 - b. Remove the plastic plug from the corresponding hole on the other side. Use a screwdriver to rock the plug loose. Then secure the supplied door-closing fitting.
 - c. Secure the lower hinge.
7. Raise the cabinet and replace the ventilation grille.
8. Unscrew the handle. Carefully press in the plastic plugs on the opposite side using a punch. Secure the handle in the plug holes. Then press the supplied plastic plugs into the holes to which the handle was previously fitted.
9. Put the cabinet in position. Check that it stands straight. See the section "Positioning the cabinet".

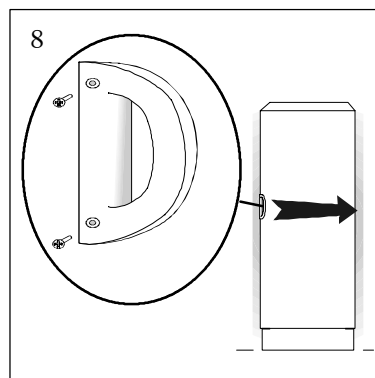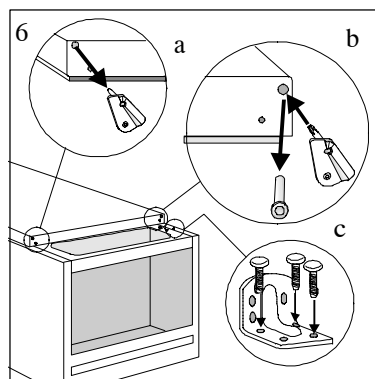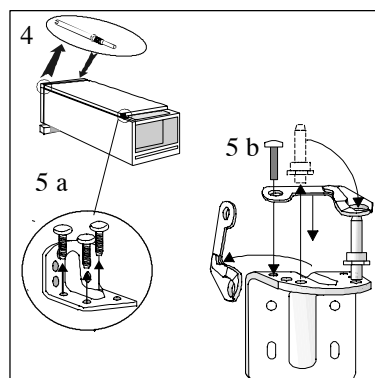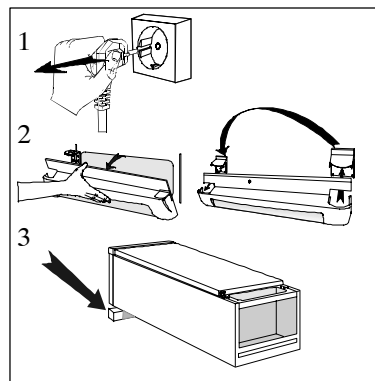

 **The Electrolux Group. The world's No.1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

 **Electrolux**

ELECTROLUX HOME PRODUCTS OPERATIONS EUROPE

© Electrolux Household Appliances Limited 2001

MARIESTAD DA-MJ

